

USER GUIDE

XB PRIME- XB-II(Transmitter & Receiver)



CE / CSA / ISO 9001 / ISO 14001 / RoHS



**Please read this manual before operating XB PRIME, and keep it for future reference.
Referez-vous au mode d'emploi avant d'utilizer la XB PRIME.**

SOFTBOXES • FLASHES • ACCESSORIES

www.rimelite.com

● INTRODUCTION

Thank you for your choice for XB PRIME's Remote Radio Sync and Control all functions by all kinds of Mobile devices



Hand-held and compact design XB Remote Radio Sync provides the perfect shooting chance whenever, everywhere.

XB-II can be used to wirelessly sync with most DSLR cameras and can control Power On/Off of XB-PRIME.

Spec:

- The operation range : Up to 100m
- Open Frequency band :2.4Ghz

● Rime Lite telecommunications

Web: www.rimelite.com

Facebook: rimelites

Twitter: @rimelites

Mail : info@rimelite.com

Headquarters: Hyundai Photonics B/D, 118-16, Chimsan-Dong, Buk-Gu, Daegu, South Korea.

Tel: 82-53-359-1445 / Fax: 82-53-359-0333

● INTELLECTUAL PROPERTY

All intellectual property, owned by or which is otherwise the property of Rime Lite or its respective suppliers relating to XB PRIME, including but not limited to, accessories, parts, or software, is proprietary to Rime Lite. No title to or ownership in the intellectual property is transferred to you. All applicable rights of the intellectual Property shall remain with Rime Lite and its suppliers.



Safety Instructions

Please read and understand all the instructions to avoid injury to yourself and/or damage to XB PRIME

- Do not expose to extreme temperatures (above 140°F or below -4°F, or above 60°C or below -20°C).
- Do not expose to moisture. Do not use XB-II near water.
- Do not let any foreign matter spill into XB-II.
- Do not expose to chemicals such as benzene and thinners. Do not use liquid or aerosol cleaners. Clean with a soft damp cloth only.
- Do not expose to direct sunlight or heat sources for a prolonged period.
- Do not try to disassemble and/or repair XB-II yourself.
- Do not subject XB PRIME to severe impact,
- Do not place heavy objects on XB-II.
- Do not subject XB-II to excessive pressure.
- Do not touch XB-II with wet hands
- Do not store in dusty areas.

Please be aware that Rime Lite claims no responsibility for damage from data loss due to breakdown, repair, or other causes.



Operation Instruction for XB OPTION



- ① Power On / Off Switch ② Status Indicator ③ Test Button ④ Channel
⑤ Battery Holder(AA Battery x 2) ⑥ Hot-shoe Connector ⑦ Antenna

OPERATION INSTRUCTION

1. Power On / Off

- ◆ If a user has not used the transmitter for 10 min,

Transmitter will automatically return to the Standby mode to save the battery energy.



2. XB-PRIME Power On/ Off



- Press 'TEST' button for 3~4 sec,

XB-PRIME body turn the power On/Off – Under the same group channel setting between Transmitter and XB-PRIME Body.

3. TEST


- XB-PRIME flashes each pressing time of TEST button.

4. Group Channel setting and Sequential flash setting on Transmitter.

GROUP	NEW XB-T
A	s/w1=up, s/w2=down, s/w3=down, s/w=down
B	s/w1=down, s/w2=up, s/w3=down, s/w=down
C	s/w1=down, s/w2=down, s/w3=up, s/w=down
D	s/w1=down, s/w2=down, s/w3=down, s/w=up
E	s/w1=up, s/w2=up, s/w3=up, s/w=up
Sequential Flashing	Double shooting : A/B, A/C, A/D, B/C, B/D, C/D Triple shooting : A/B/C, B/C/D


The Diagram for Double-Picture's function on Transmitter XB-II

1) Group Channel setting.

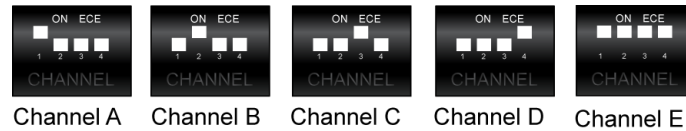

2) Double shooting function setting.

-Sequential Flashing.

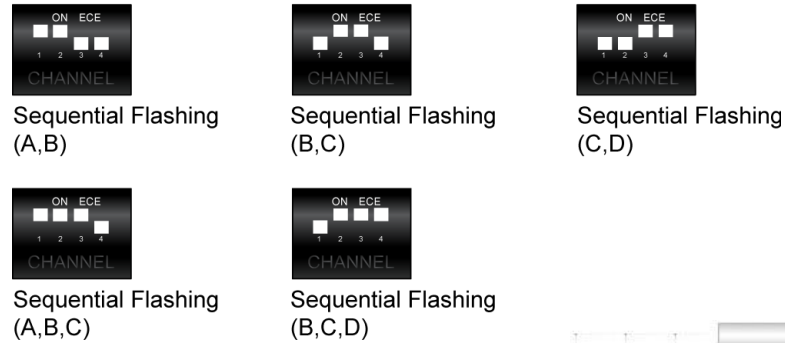

Example)

1) Settle Group Channel each XB-PRIME as the right sample image. ('A' and 'B')

2) Set Double shooting function mode 'AB' on XB-Transmitter.

3) 1st shot of Camera is for first choice Group flashes.

4) 2nd shot of Camera is for Second choice Group flashes.

Available to take images as below, and then a user can fasten Imaginary Background to Picture easily.



4. NOTICE

- ◆ Please replace new batteries when LED light is dim and it doesn't work.
- ◆ If a user has not used the transmitter for 10 min, transmitter will automatically return to the Standby mode to save the battery energy.

Check list when troubling

1. Cannot turn on the power.

- 1) Please check the power switch on.
- 2) Please check the power cable inserted correctly.

2. Unit does not flash.

- 1) Please check the flash tube inserted correctly.
- 2) Please check the trigger coil contacted with the flash tube legs.
- 3) Please change the flash tube.

3. Unit does not recharge.

- 1) Please check the power cable inserted correctly.
- 2) Please check the units voltage supply it correct.
- 3) Please change the fuse.

4. Ready "beep" does not sound.

- 1) Please check the "SOUND" button pressed.
- 2) Please make sure the unit fully recharging.

5. Unit does not fire from sync connection or transmitter or remote control.

- 1) Check the sync cord or receiver is inserted correctly.
- 2) Try another sync cord or wireless system.

6. Unit sounds long "beep" sound.

- 1) It has been started in "overheat" mode and it turns off automatically. After a break for cooling down (from 5 min. to 10 min.), you can turn it on again.

XB PRIME is free of defects in material and workmanship for a period of twenty four (24) months from the original date of purchase by the consumer.

If during the period of warranty this product proves defective under normal use and service, you should return the product to the retailer from whom it was originally purchased, or to any Rime Lite authorized dealer or authorized service center, if outside the time limit for returns imposed by the retailer.



- Warranty Conditions

1. The warranty is only valid presentation of the proof purchase consisting of original invoice or sales slip confirmation, indicating the date of purchase, retailer's name, model and serial number. Rime Lite reserve the right to refuse warranty service if this information has been removed or changed after the original purchased of the product from the retailer.
2. Rime Lite sole obligations are to the repair of the defective part, or at its discretion, replacement of the product (service exchange unit)
3. Warranty repair must be carried out by an authorized Rime Lite dealer/ service center. No reimbursement will be made for repairs carried out by non-Rime Lite, and warranty coverage will not be valid for any repairs or damage caused by such repairs.
4. Repair or replacement under the term of this warranty does not give right to extension to or a new starting of the period of warranty. Repair or direct replacement under the terms of this warranty may be fulfilled with functionally equivalent service exchange units.
5. The warranty is not applicable in cases other than defects in material and workmanship. The warranty does not cover the following:
 - A. Periodic checks, maintenance, repair, and replacement of parts due to normal wear and tear.
 - B. Abuse or misuse, including but not solely limited to the failure to use this product for its normal purpose in accordance with Rime Lite instructions for usage and maintenance.
 - C. Failure of or damage to the product arising from incorrect installation or use inconsistent with technical or safety standards, or failure to comply with product manual instructions.